



PACER 5-FT AIR HOCKEY TABLE

ASSEMBLY INSTRUCTIONS



Please Do Not Hesitate to
Contact Our Consumer Hotline
at 1-888-620-6088
with Any Questions That May
Arise During Assembly or
Use of This Product!

THANK YOU!

Thank you for purchasing this product. At Freetime Fun, we work around the clock and around the globe to ensure that our products maintain the highest possible quality. If you experience any issues during assembly or use of this product, please don't hesitate to contact our Consumer Hotline at 1-888-620-6088 for immediate assistance. Please read the warranty information at the bottom of these assembly instructions for further details.

ASSEMBLY TIPS

IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT.

1. Find a clean, level surface to begin the assembly of your game table. We recommend that two adults work together to assemble this game. You may want to carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.
2. Remove all of the contents from box and verify that you have all of the parts shown on the Parts List before you begin assembly. **Note: Some parts may be pre-installed or pre-assembled.**
3. **When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before final tightening with screwdriver or wrench.**
4. Electric screwdrivers may be helpful during assembly; however, please set a **low torque** and use extreme caution because screws may be stripped or overtightened, resulting in damaged parts, if the electric screwdriver's torque is set too high.




CARE AND USE

1. This product is intended for **INDOOR** use only.
2. Do NOT drag the table when moving it, as this may cause damage to the legs.

 




 

 

 


PACER 5-FT AIR HOCKEY TABLE

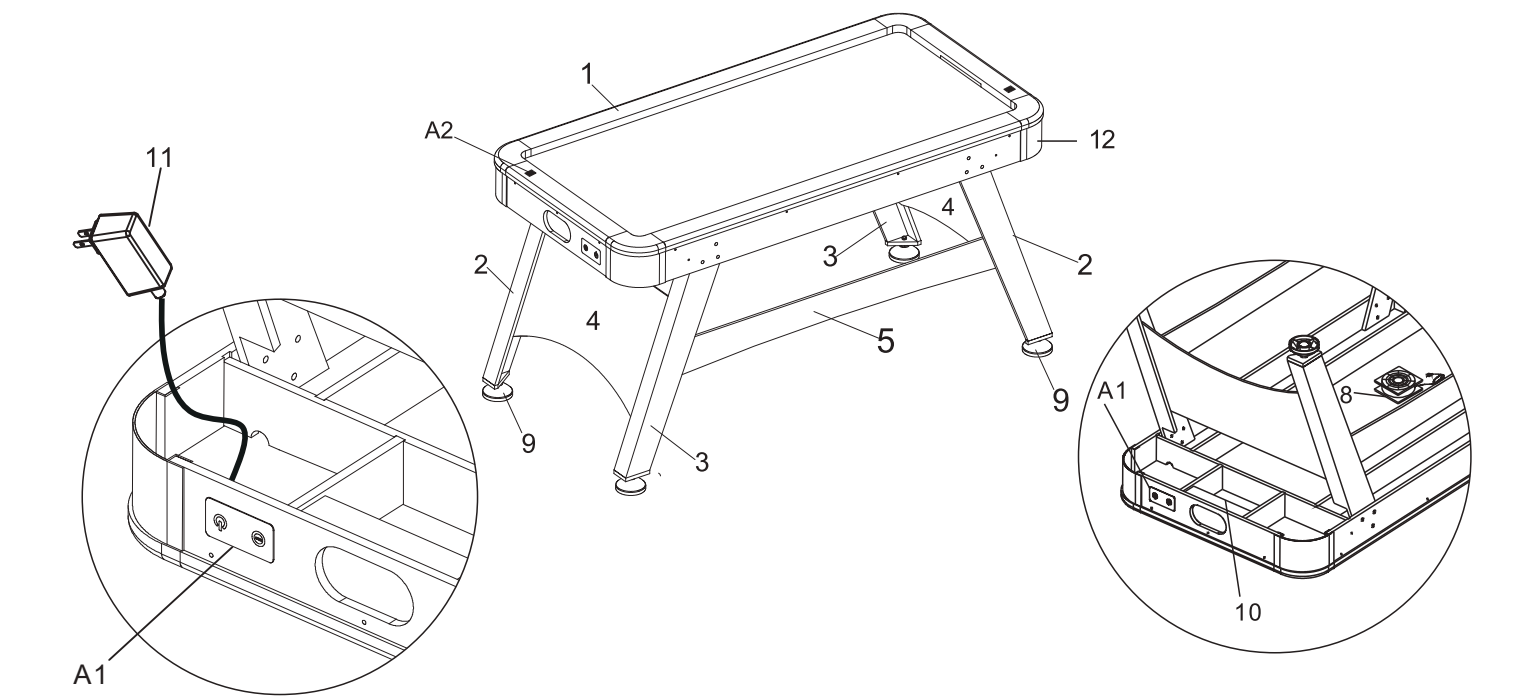Parts List

 

 

 


Illustrations Not to Scale

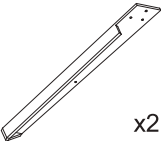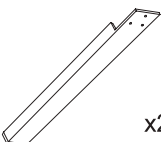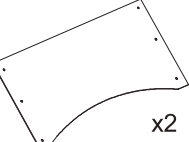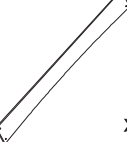PARTS

 <p>x1</p> <p>TABLE CABINET</p>	 <p>x2</p> <p>LEFT LEG</p>	 <p>x2</p> <p>RIGHT LEG</p>	 <p>x2</p> <p>END LEG PANEL</p>	 <p>x2</p> <p>SIDE LEG PANEL</p>	 <p>x2</p> <p>STRIKER</p>	 <p>x2</p> <p>PUCK</p>
 <p>(Pre-installed) x1</p> <p>BLOWER MOTOR</p>	 <p>x4</p> <p>LEG LEVELER</p>	 <p>(Pre-installed) x2</p> <p>PUCK CATCHER</p>	 <p>x1</p> <p>CONTROL PAD ADAPTER</p>	 <p>(Pre-installed) x4</p> <p>CORNER</p>		


HARDWARE PACK RA2007 - H

 <p>x12</p> <p>1/4" x 1-1/4" BOLT</p>	 <p>x12</p> <p>1/4" WASHER</p>	 <p>x12</p> <p>1/8" x 1/2" SCREWS</p>	 <p>x1</p> <p>TOOL</p>	 <p>x8</p> <p>1/8" x 3/4" SCREWS</p>
--	---	--	---	--

For replacement parts please call 1-888-620-6088


ASSEMBLY INSTRUCTIONS

Parts Reference Diagram

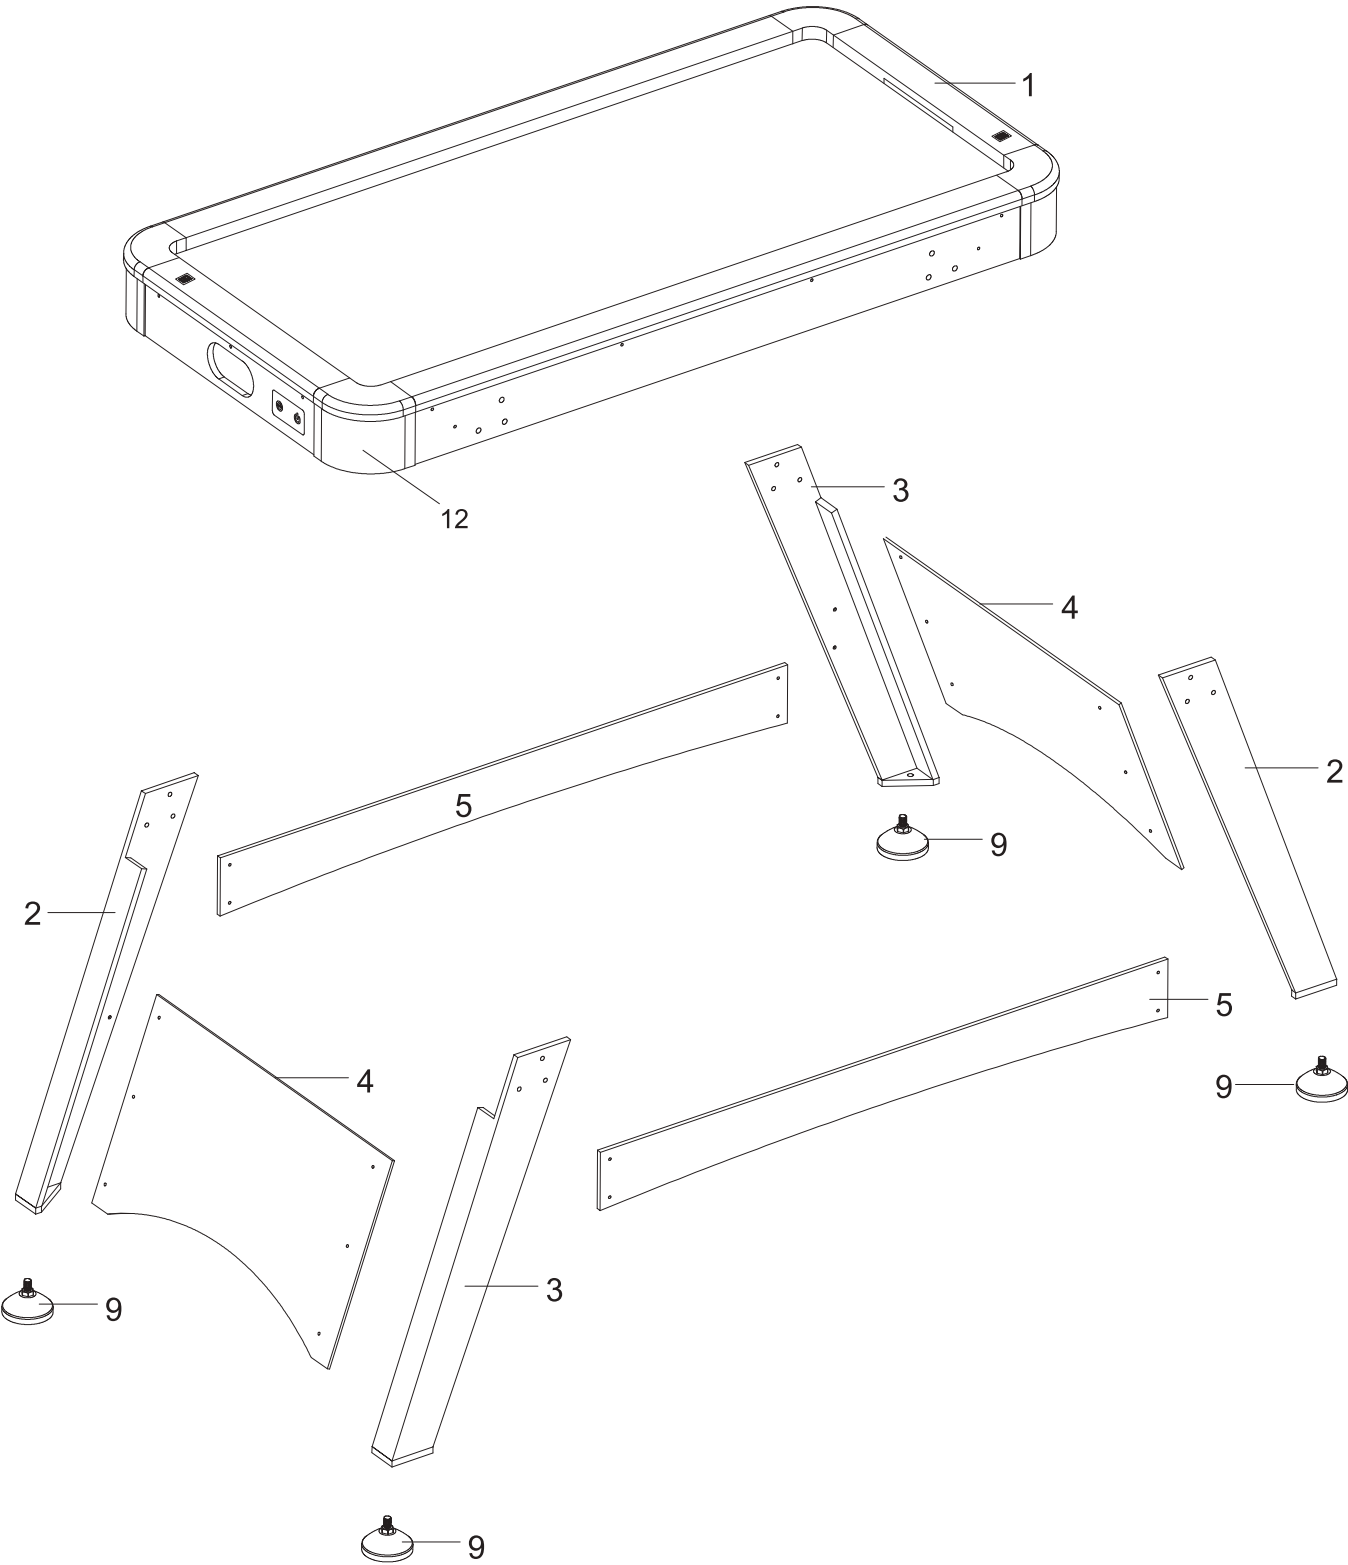


ASSEMBLY INSTRUCTIONS

STEP 1.

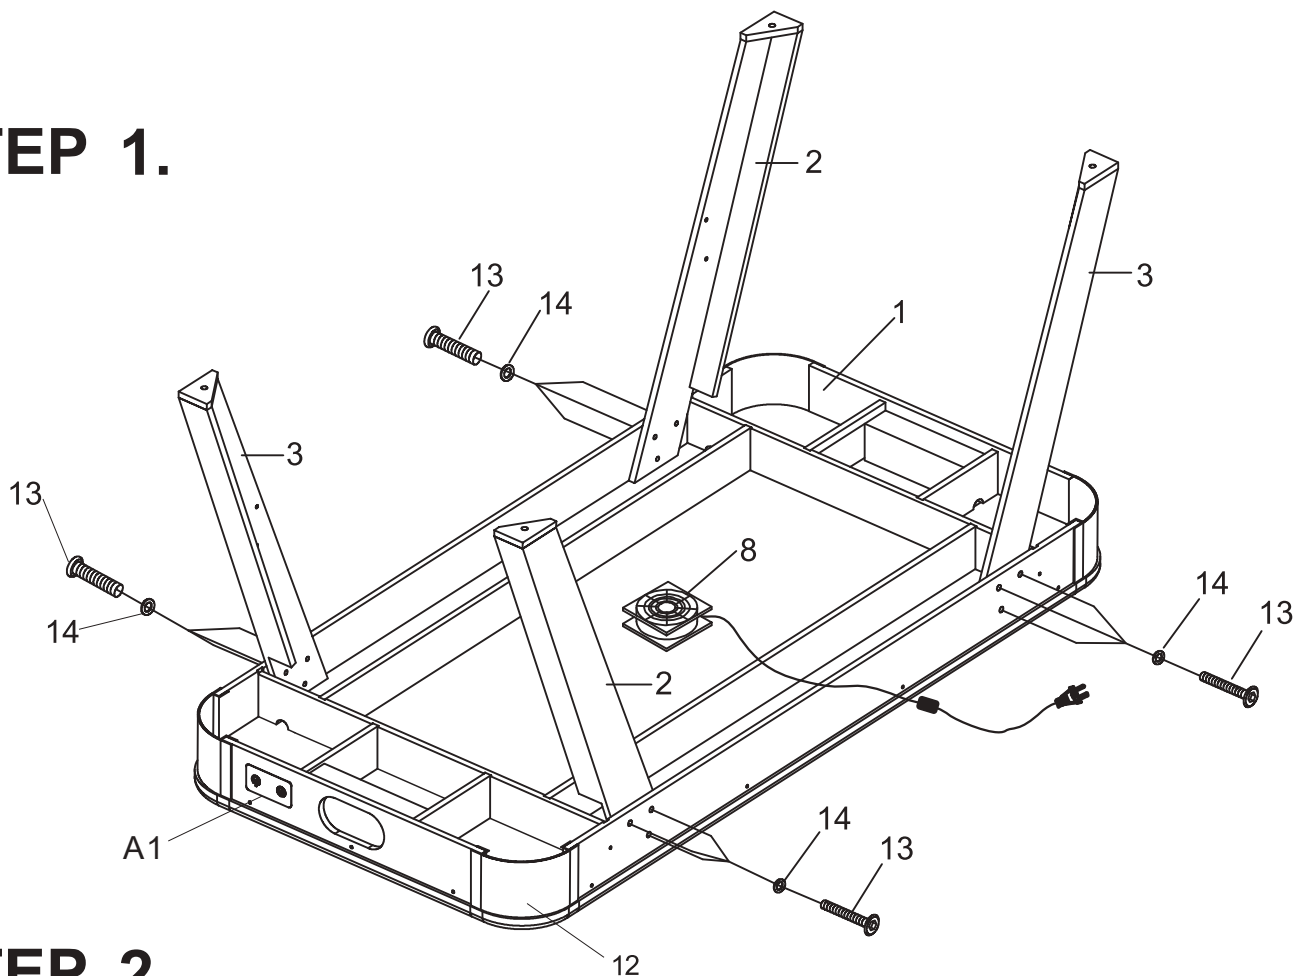


STEP 2.

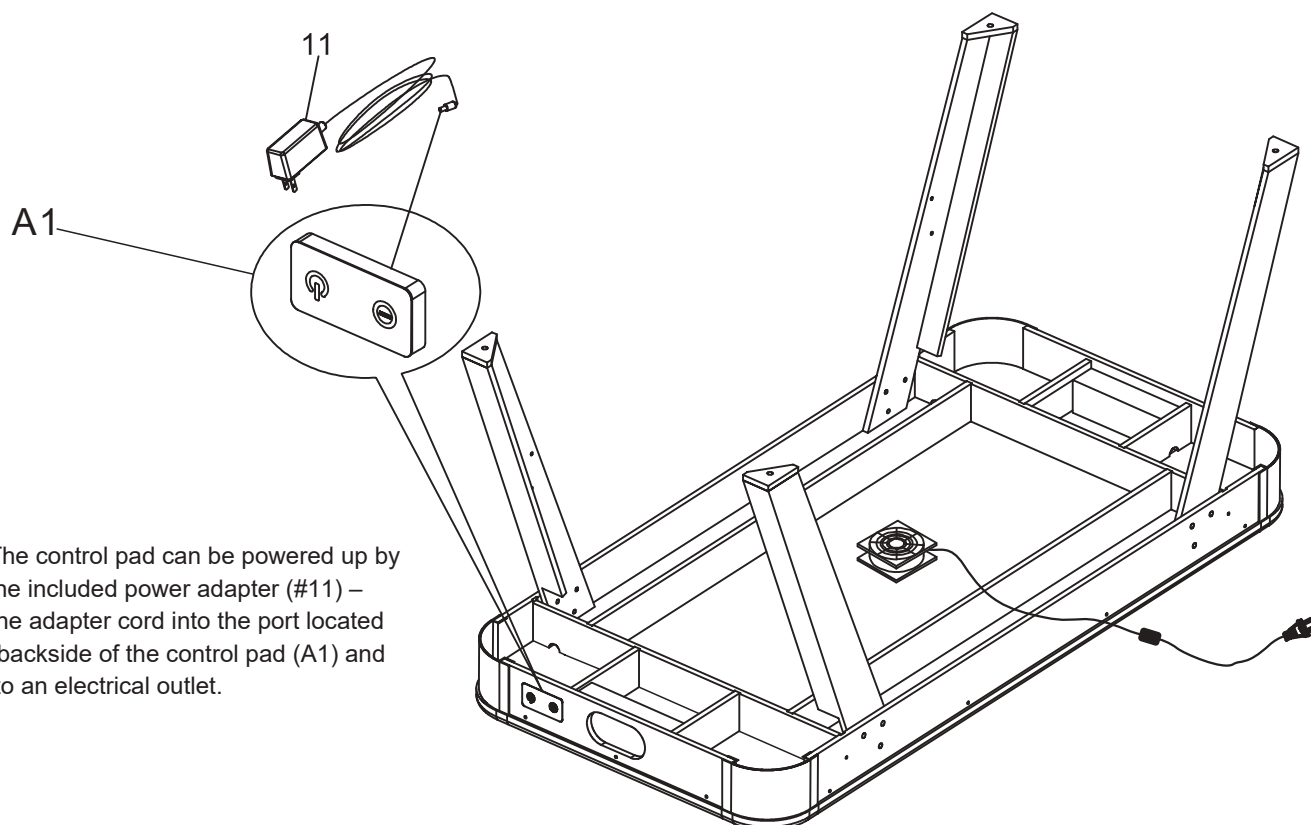


Note: The control pad can be powered up by using the included power adapter (#11) – insert the adapter cord into the port located on the backside of the control pad (A1) and plug into an electrical outlet.

ASSEMBLY INSTRUCTIONS

STEP 3.

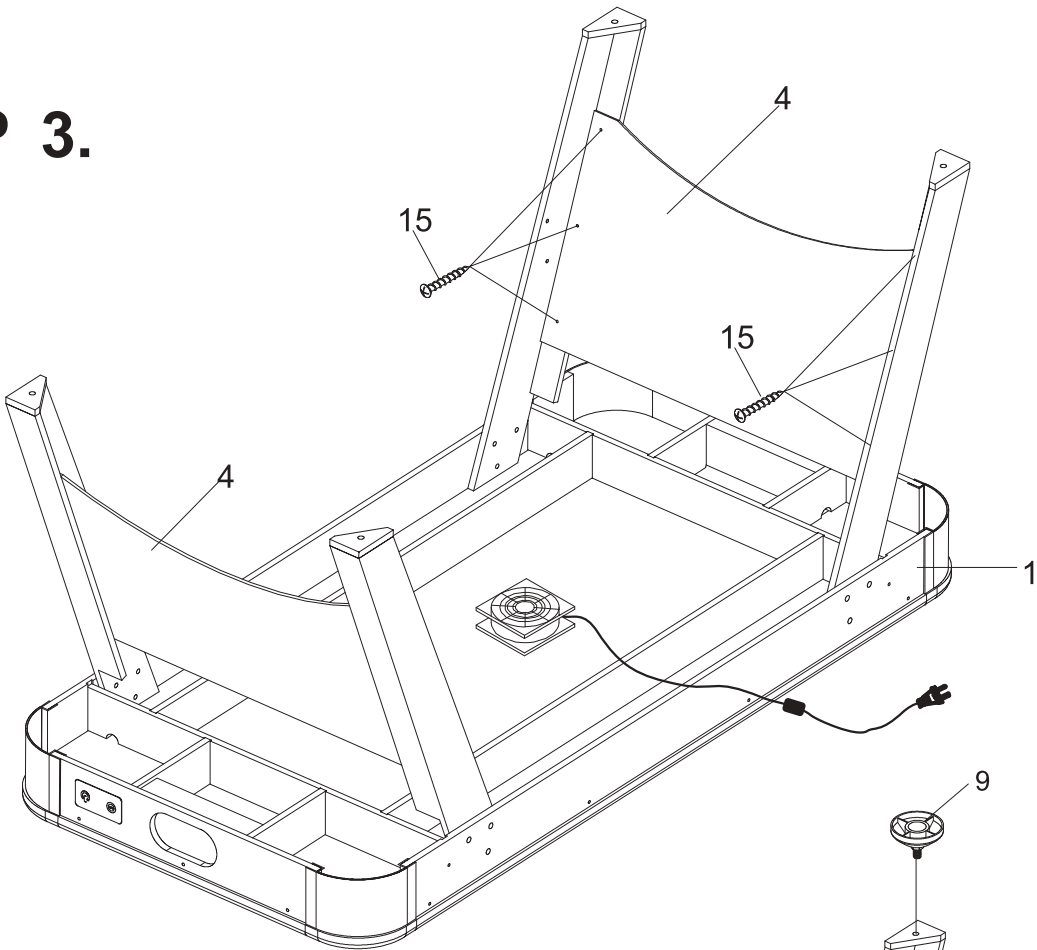


STEP 4.

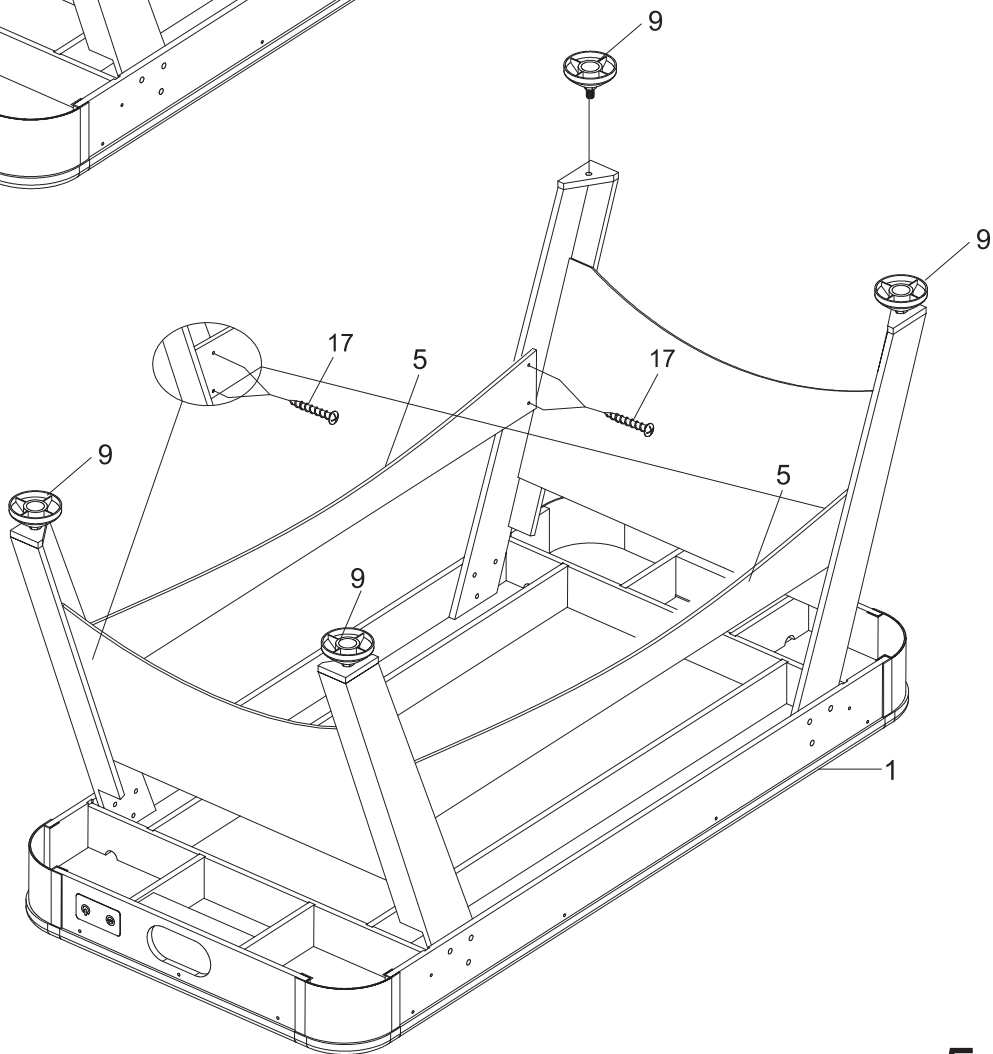


ASSEMBLY INSTRUCTIONS

STEP 5.

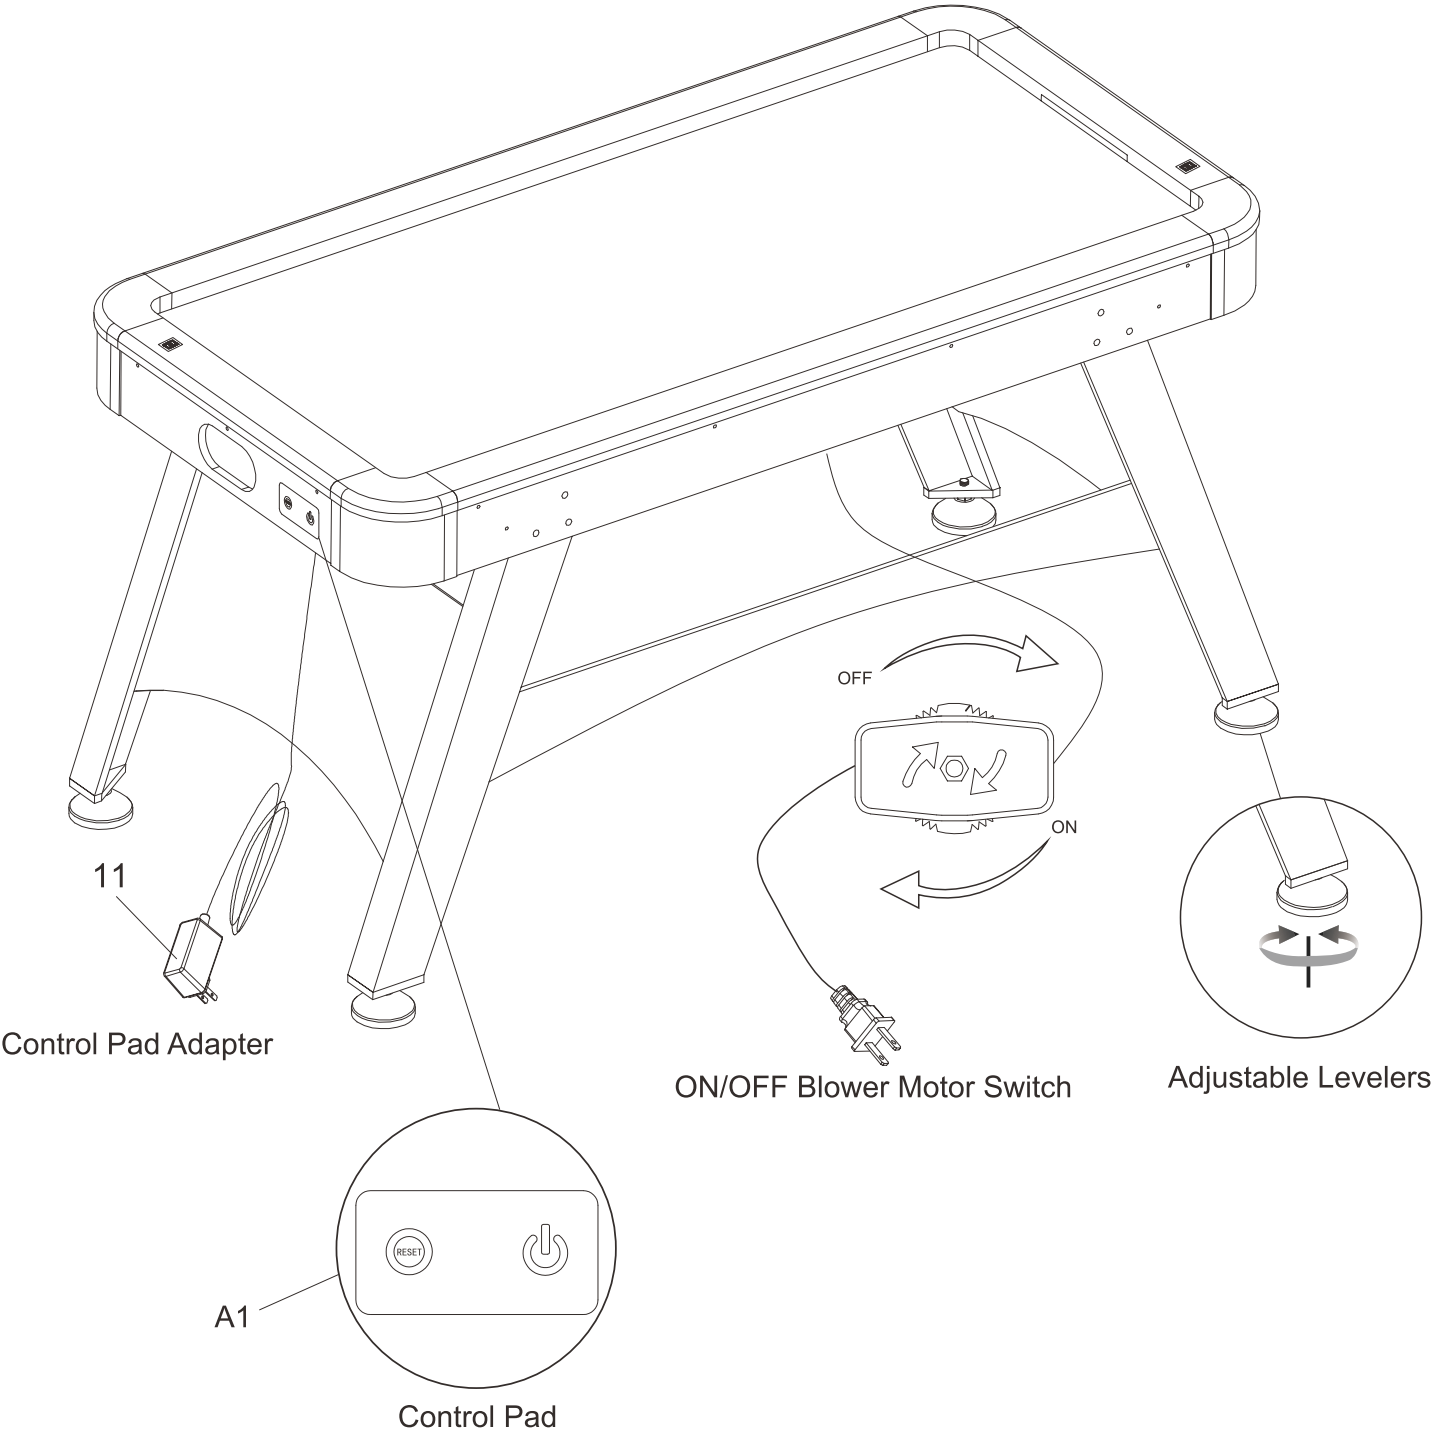


ELECTRONIC SCORING SYSTEM LAYOUT AND PARTS

NOTE: THESE PARTS HAVE BEEN PRE-ASSEMBLED ON YOUR NEW TABLE; SCHEMATIC BELOW IS FOR REFERENCE ONLY

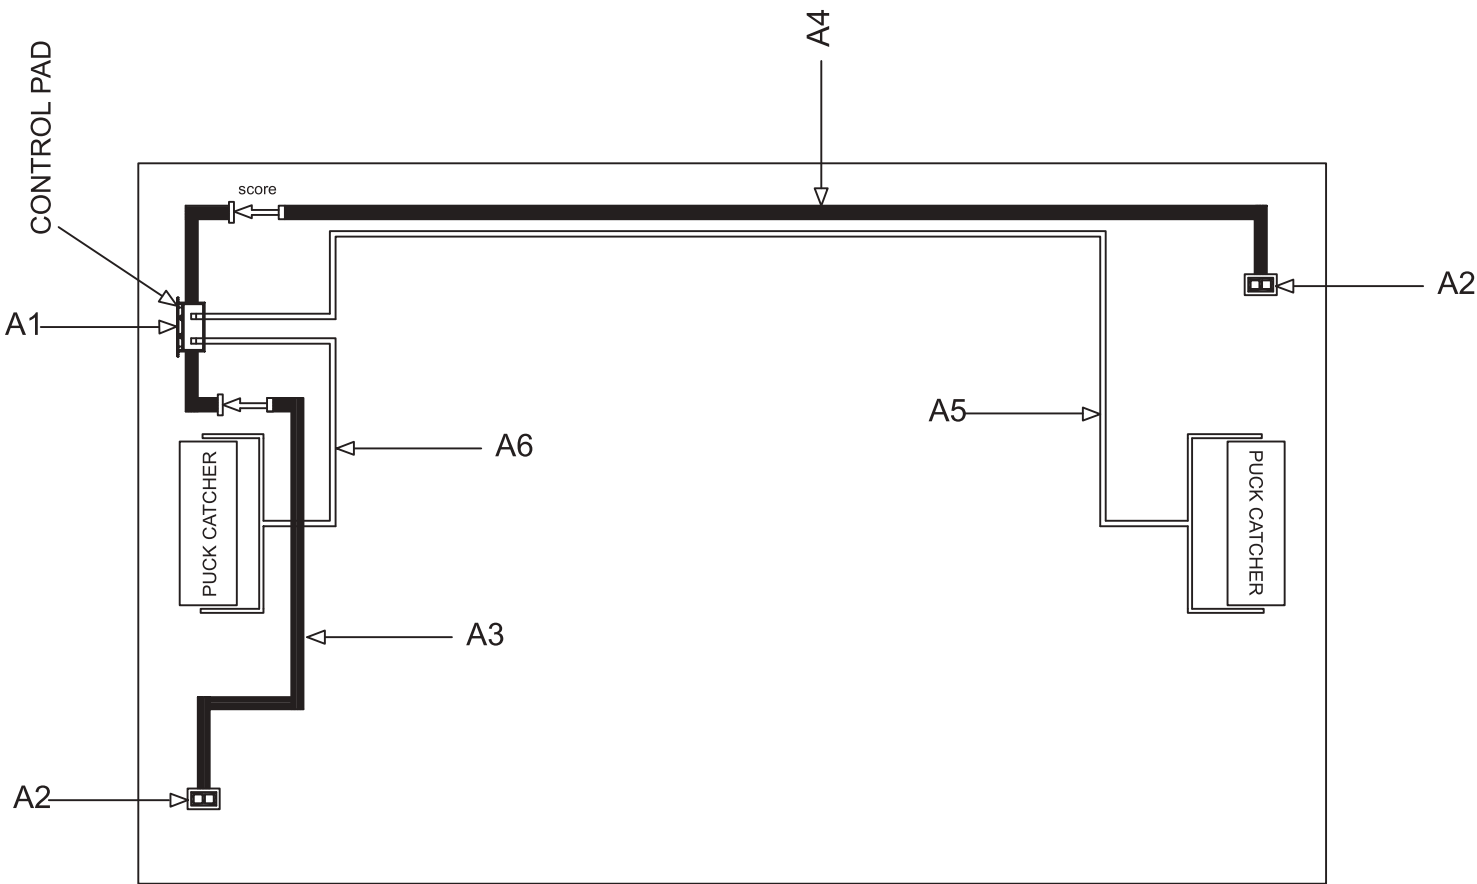

PRE-ASSEMBLED PARTS


A1  X1 CONTROL PAD	A2  LED GAME X2 SCORE DISPLAY	A3  LONG X1 SCORER WIRING	A4  SHORT X1 SCORER WIRING	A5  LONG X1 SCORING SENSOR	A6  SHORT X1 SCORING SENSOR	A7  1/8" x 1/2" X4 SCREW SIZE
---	--	--	---	--	--	--

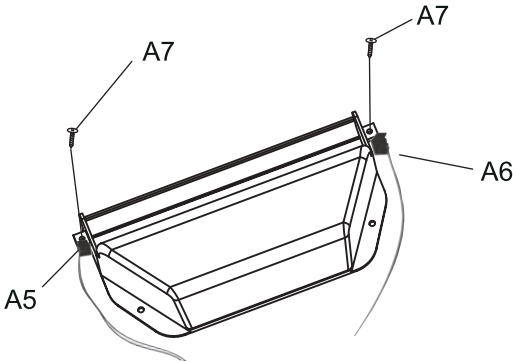


NOTE: If the goal sensors are not working properly, turn the table over and adjust sensors so they are directly in line with each other. If this doesn't help, replace scoring sensor wire (A5 or A6) as shown in above diagram.

OPERATING INSTRUCTIONS

CONTROL PAD

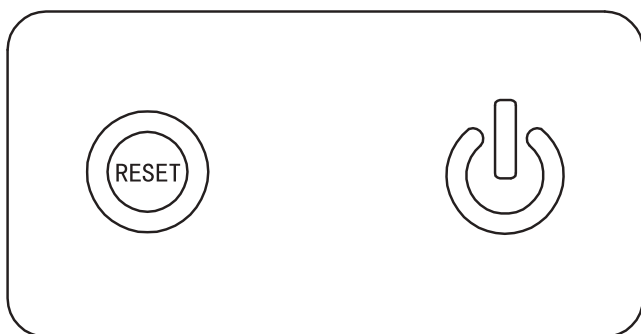


FRONT

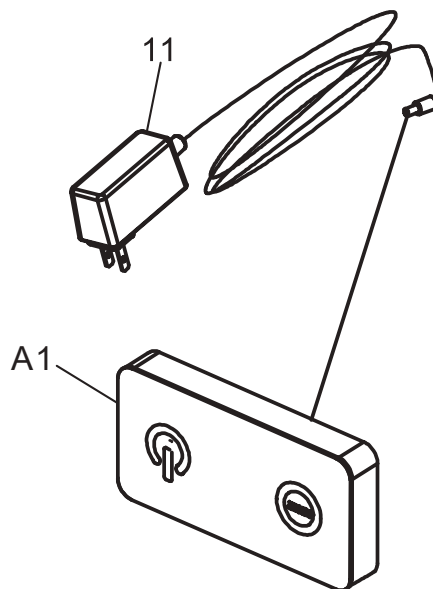

Note: The control pad can be powered up by using the included power adapter (#11) – insert the adapter cord into the port located on the backside of the control pad (A1) and plug into an electrical outlet.

OPERATING INSTRUCTIONS:

- Use  switch: To turn on and turn off the power

- Use  button: To start scoring or to start over

1. Turn on the power, by pushing the ON/OFF switch
2. Push the RESET button to start the game.
3. The system starts with no time limit mode, so the first team to score 10 goals is the winner.
4. Push the RESET button to restart the game at any time during play.
5. Turn OFF the game when NOT in use.

1-YEAR LIMITED WARRANTY

This product is warranted to the original purchaser to be free from defects in material or workmanship for a period of 365 days from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident or any other event beyond the control of the manufacturer. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use; the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal or state law. Neither the manufacturer nor any of its representatives assumes any other liability in connection with this product.

All warranty claims must be made to Freetime Fun. A purchase receipt with purchase date will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.

For further warranty information or inquiries, please contact us at customerservice@freetimefun.com or 1-888-620-6088; 1830 E. Fabyan Pkwy., Batavia, IL 60510

