



**BEST IN GAMES, SAUNAS,
POOL AND PATIO**

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE RB6700



FREETIME FUN
1830 E. FABYAN PKWY.
BATAVIA, IL 60510
WWW.FREETIMEFUN.COM

Check all packaging before discarding.

Be sure all parts identified in the assembly manual are included.

Don't assemble if parts are missing.

If you are missing parts or have questions please contact our toll free line at 1-888-620-6088.

Thank you for purchasing this product. If you experience any issues during assembly or use of this product, please don't hesitate to contact Customer Service at **1-888-620-6088** for immediate assistance.

ASSEMBLY TIPS

IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT.

 

 



 




Estimated Assembly Time: 90 minutes.

1. Find a clean, level surface to begin the assembly of your game table. Assembly will require two adults. You may want to carefully cut the four corners of the box so that the bottom of the box can be used as your work surface.
2. Remove all of the contents from the box and verify that you have all of the parts shown on the Parts List before you begin assembly. **Note: Some parts are pre-installed or pre-assembled.**
3. **When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before final tightening with screwdriver or wrench.**
4. Electric screwdrivers may be helpful during assembly; however, please set a low torque and use extreme caution because screws may be stripped if overtightened, resulting in damaged parts.
5. **CAUTION: THE TABLE IS VERY HEAVY; WE SUGGEST THAT FOUR STRONG ADULTS ASSIST IN THE ASSEMBLY PROCESS AND POSITIONING OF THE TABLE INTO ITS FINAL DESTINATION.**

  ► **THIS PRODUCT IS INTENDED FOR INDOOR USE ONLY.
DO NOT DRAG THE TABLE WHEN MOVING IT AS THIS MAY CAUSE DAMAGE TO THE LEGS.**

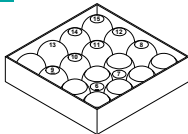


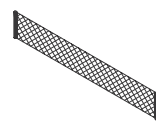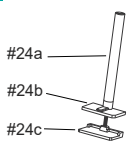



7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

ACCESSORIES

<p>14</p>  <p>Billiard Ball Set XRB12008 (1)</p>	<p>15</p>  <p>Triangle XRB12009 (1)</p>	<p>16</p>  <p>Cue Chalk XRB16012 (2)</p>	<p>17</p>  <p>57" Cue Stick XRB15007 (2)</p>	<p>18</p>  <p>8" Table Brush XRB16013 (1)</p>	<p>19</p>  <p>Striker XRA10009 (4)</p>
<p>20</p>  <p>Puck XRB16014 (4)</p>	<p>21</p>  <p>Table Tennis Racket XRB12034 (2)</p>	<p>22</p>  <p>Table Tennis Ball XRM17016 (2)</p>	<p>23</p>  <p>Table Tennis Net XRB16015 (1)</p>	<p>24</p>  <p>#24a #24b #24c</p> <p>Table Tennis Net Post XRB12036 (2)</p>	

 HARDWARE PACK

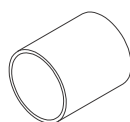 XRB16016 (1)

<p>25</p>  <p>5/16" x 1-3/4" Bolt (16)</p>	<p>26</p>  <p>5/16" Washer (16)</p>	<p>27</p>  <p>Nut (2) (Pre-Assembled)</p>	<p>28</p>  <p>Rotation Shaft Sleeve (2) (Pre-Assembled)</p>	<p>29</p>  <p>1" Washer (2) (Pre-Assembled)</p>	<p>30</p>  <p>Allen Wrench with Handle (1)</p>
<p>31</p>  <p>Wrench (1)</p>					

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

PARTS LIST


 
 
 
 
 
 
 
 
 
 
 
 
 
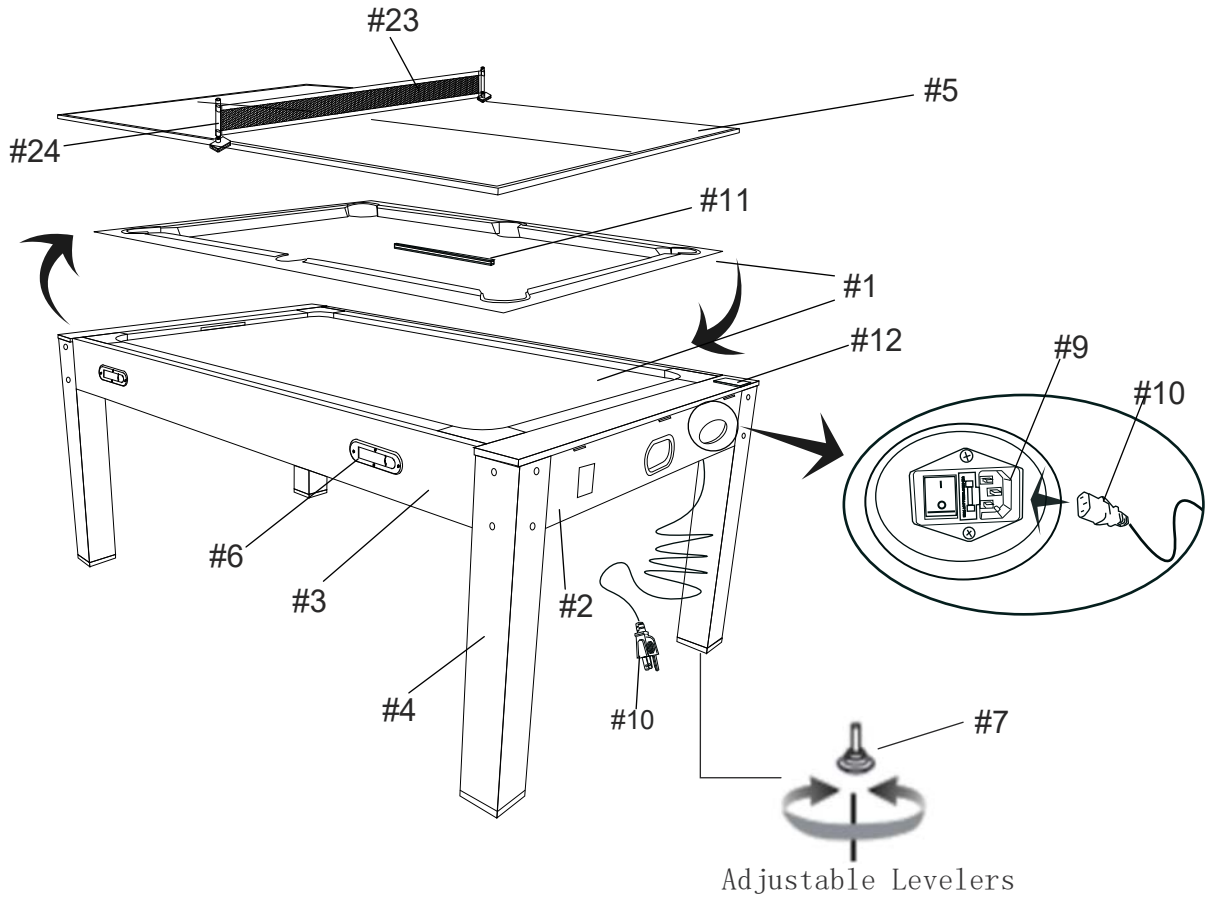 


TABLE PARTS

<p>1</p>  <p>(Pre-Assembled) Center Game Surface Cabinet XRB16001 (1)</p>	<p>2</p>  <p>(Pre-Assembled) Cabinet End Panel XRB16002 (2)</p>	<p>3</p>  <p>(Pre-Assembled) Cabinet Side Panel XRB16003 (2)</p>	<p>4</p>  <p>Leg XRB16004 (4)</p>	<p>5</p>  <p>Table Tennis Top XRB16005 (1)</p>
<p>6</p>  <p>(Pre-installed) Safety Latches XRB16006 (4)</p>	<p>7</p>  <p>(Pre-assembled) Leg Leveler XRB16007 (4)</p>	<p>8</p>  <p>(Pre-installed) Blower Motor XRB16008 (1)</p>	<p>9</p>  <p>(Pre-installed) On/Off - Power Cord Port XRB16009 (1)</p>	<p>10</p>  <p>Blower Power Cord XRB16010 (1)</p>
<p>11</p>  <p>Table Tennis Top Support Board XRB16011 (1)</p>	<p>12</p>  <p>EVA Top Protection Pad XRB12041 (6)</p>	<p>13</p>  <p>(Pre-Installed) Top Alignment Pin XRB15005 (3)</p>		


7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

 STEP 1

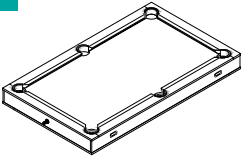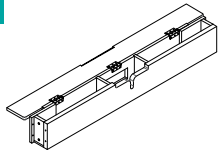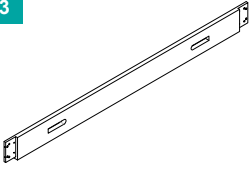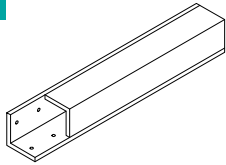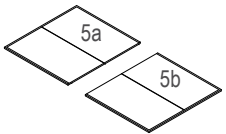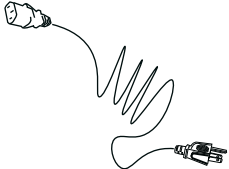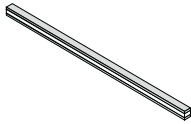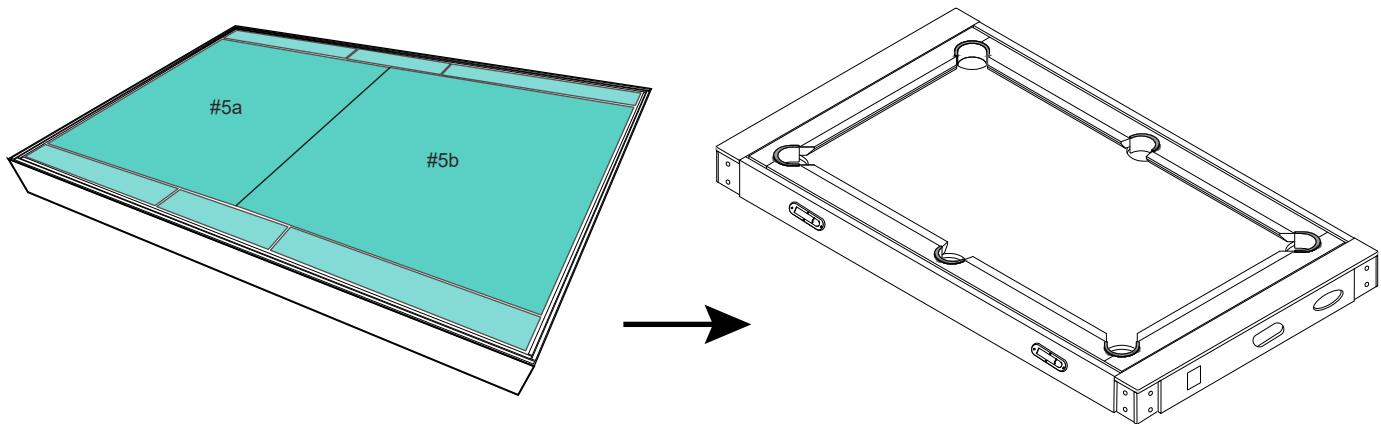

Open the table carton and remove the two # 5 table top sections, four legs, and packaging materials. Carefully cut the four corners of the box so that the table cabinet can easily be removed from the carton.

 STEP 2

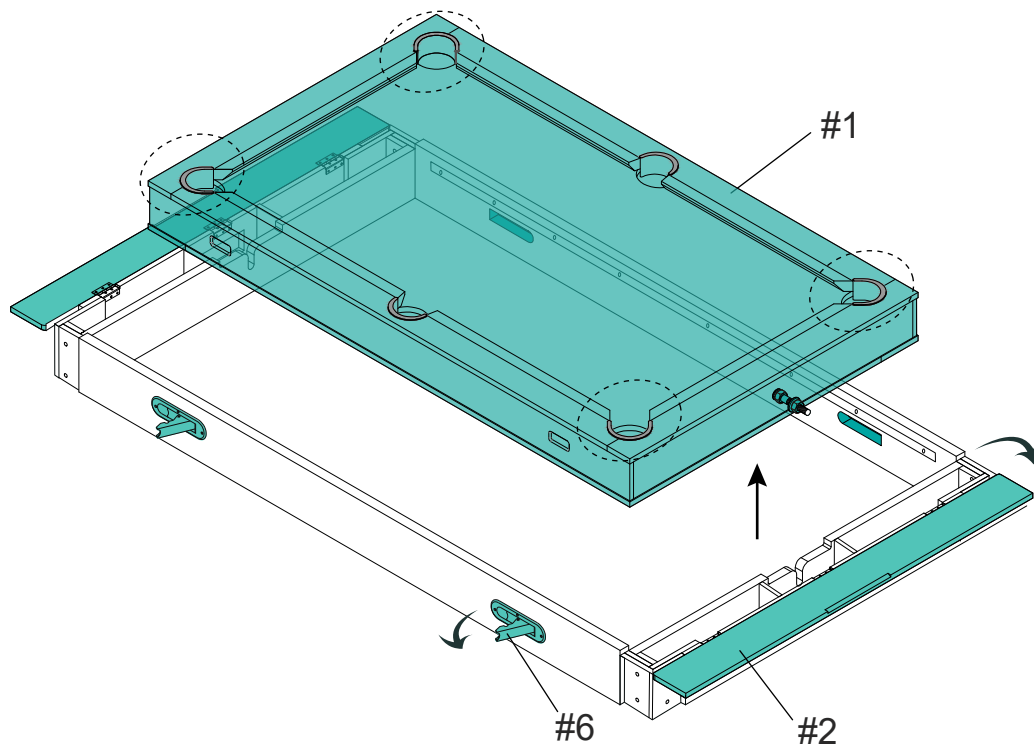


Pull all four #6 safety latches outward, and flip open the #2 end cabinet sections of the table frame to allow the center game surface of the cabinet to be removed. **“LIFT THE CENTER GAME SURFACE SECTION FROM THE CARTON BY FIRMLY GRASPING INSIDE THE BILLIARD POCKET AREAS ONLY”** . Carefully set the center game surface out of the way, in a safe spot for now.

CAUTION: THE TABLE CENTER GAME SURFACE IS VERY HEAVY; IT IS RECOMMENDED THAT FOUR STRONG ADULTS ASSIST IN LIFTING THE SURFACE FROM THE CARTON.


7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

 STEP 2

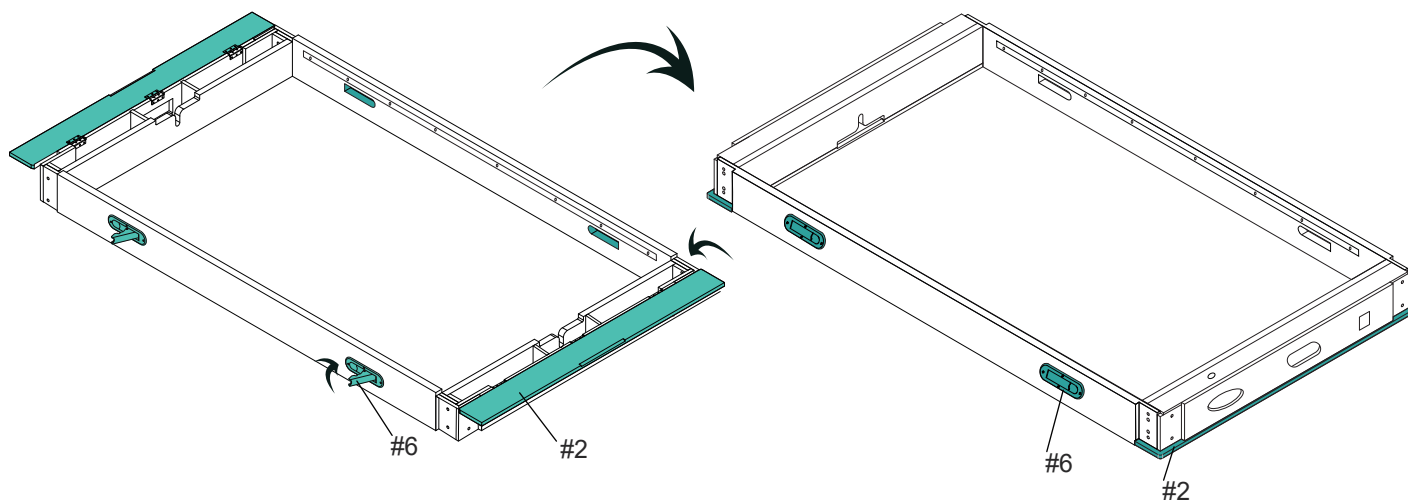

Once the center game surface has been removed, push all four #6 safety latches inward, and close the #2 end cabinet sections. Rotate the table cabinet frame so that the bottom side is facing up.

 STEP 3

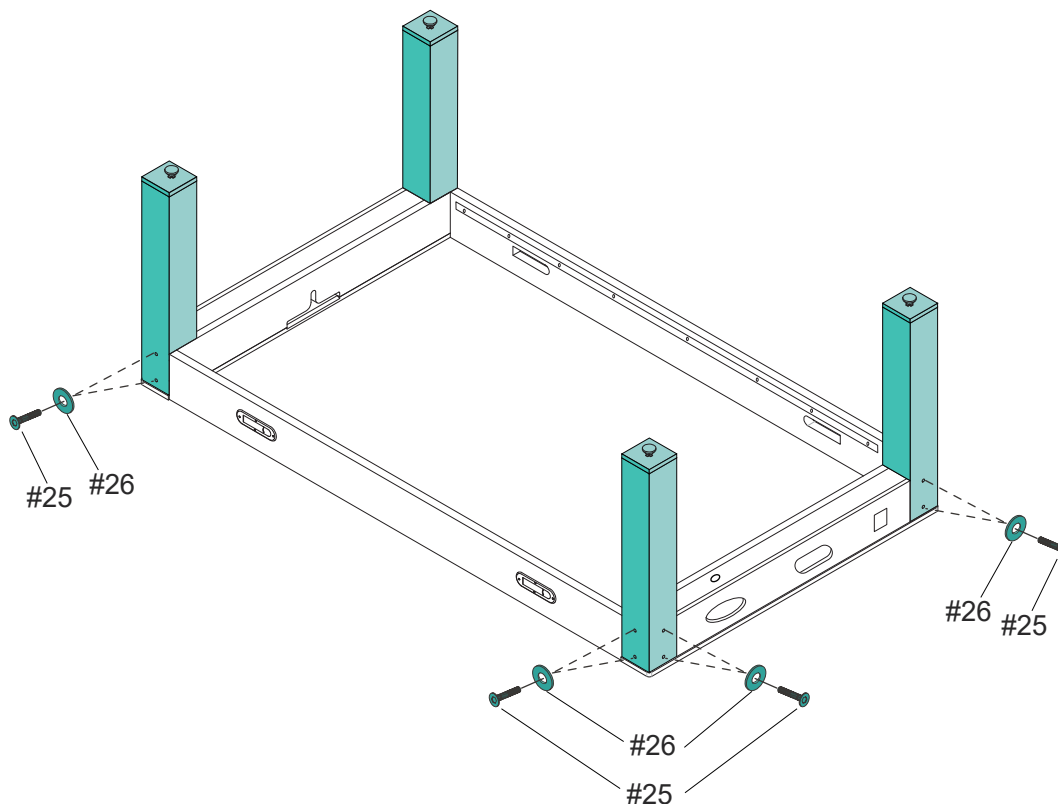


Align the pre drilled holes in a leg with the pre-installed inserts in the end/side panels, insert bolt #25 with washer #26 through the pre drilled holes and into the pre-installed inserts in the end/side panels, firmly tighten in place. Repeat this process for all 4 legs.

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

STEP 4 CAREFULLY FLIP THE TABLE OVER INTO THE UPRIGHT POSITION


CAUTION: THE TABLE FRAME IS VERY HEAVY; IT IS RECOMMENDED THAT FOUR STRONG ADULTS ASSIST IN FLIPPING THE TABLE FRAME OVER INTO THE UPRIGHT POSITION.

 HOLD TABLE CORNER

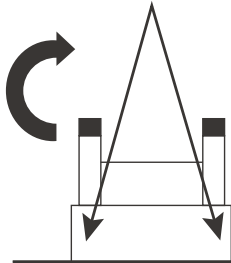


Firmly grasp the table at each cabinet corner area

 CABINET

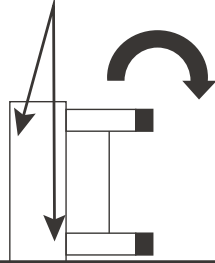


Carefully rotate the table to the upright position by grasping table top

 DO NOT LEAN THE TABLE ON ITS LEGS!

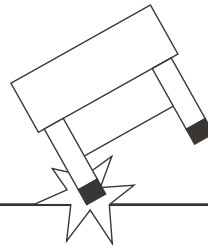


Position the table in its desired location and level the table to the floor by adjusting the leg levelers

 DO NOT HOLD THE LEGS

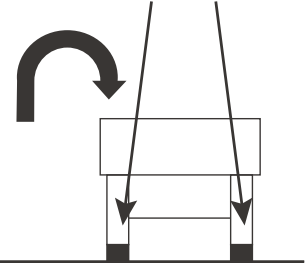

 
STEP 5

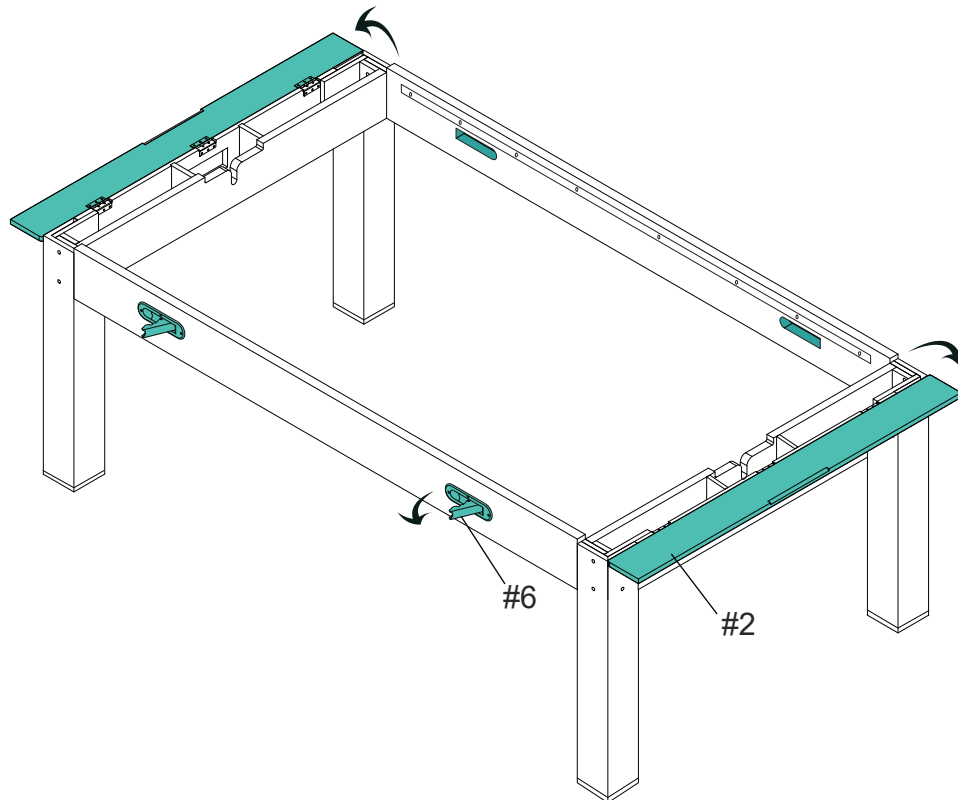

Pull all safety latches outward and flip open the end cabinet sections of the table frame to allow room for the installation of the center game surface cabinet.

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

 STEP 6

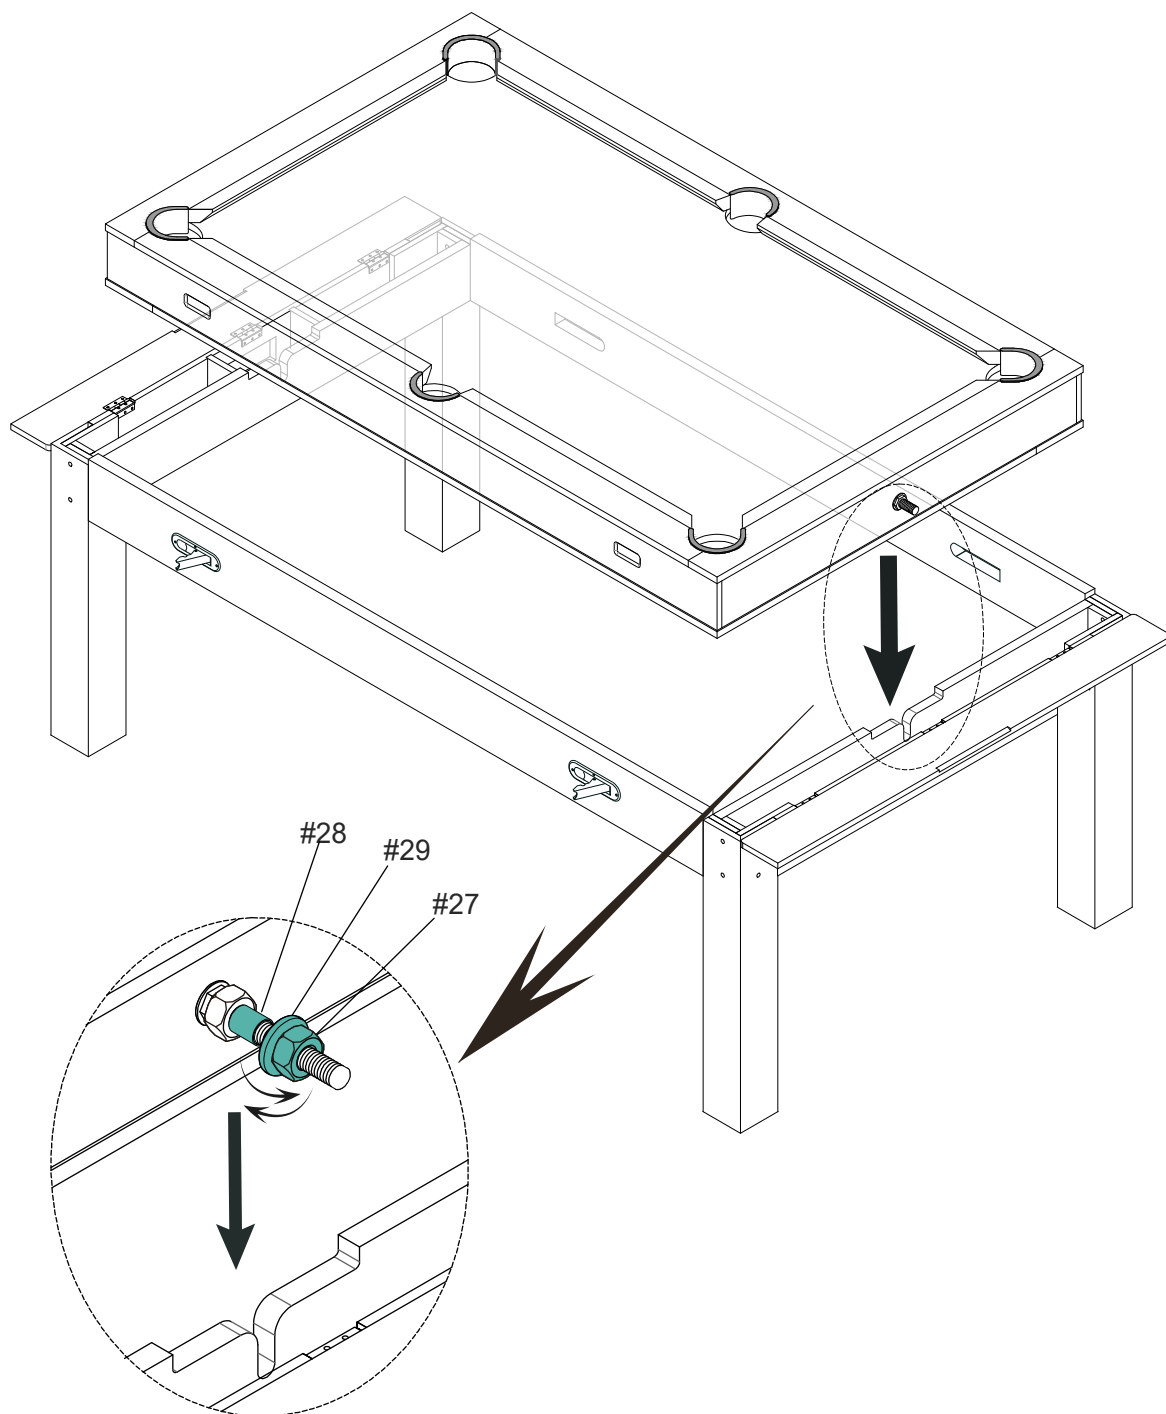


“LIFT THE CENTER GAME SURFACE SECTION BY FIRMLY GRASPING INSIDE THE BILLIARD POCKET AREAS ONLY”. Align the metal rotation rod with the cutouts located on each end of the table frame cabinet and carefully insert the metal rod into the table cabinet. Note: After inserting the metal rod into the cabinet, adjust the #27 nut and #29 washer and tighten in place.


CAUTION: THE TABLE IS VERY HEAVY; WE SUGGEST THAT FOUR STRONG ADULTS ASSIST IN THE ASSEMBLY PROCESS AND POSITIONING OF THE TABLE INTO ITS FINAL DESTINATION.

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

 STEP 7


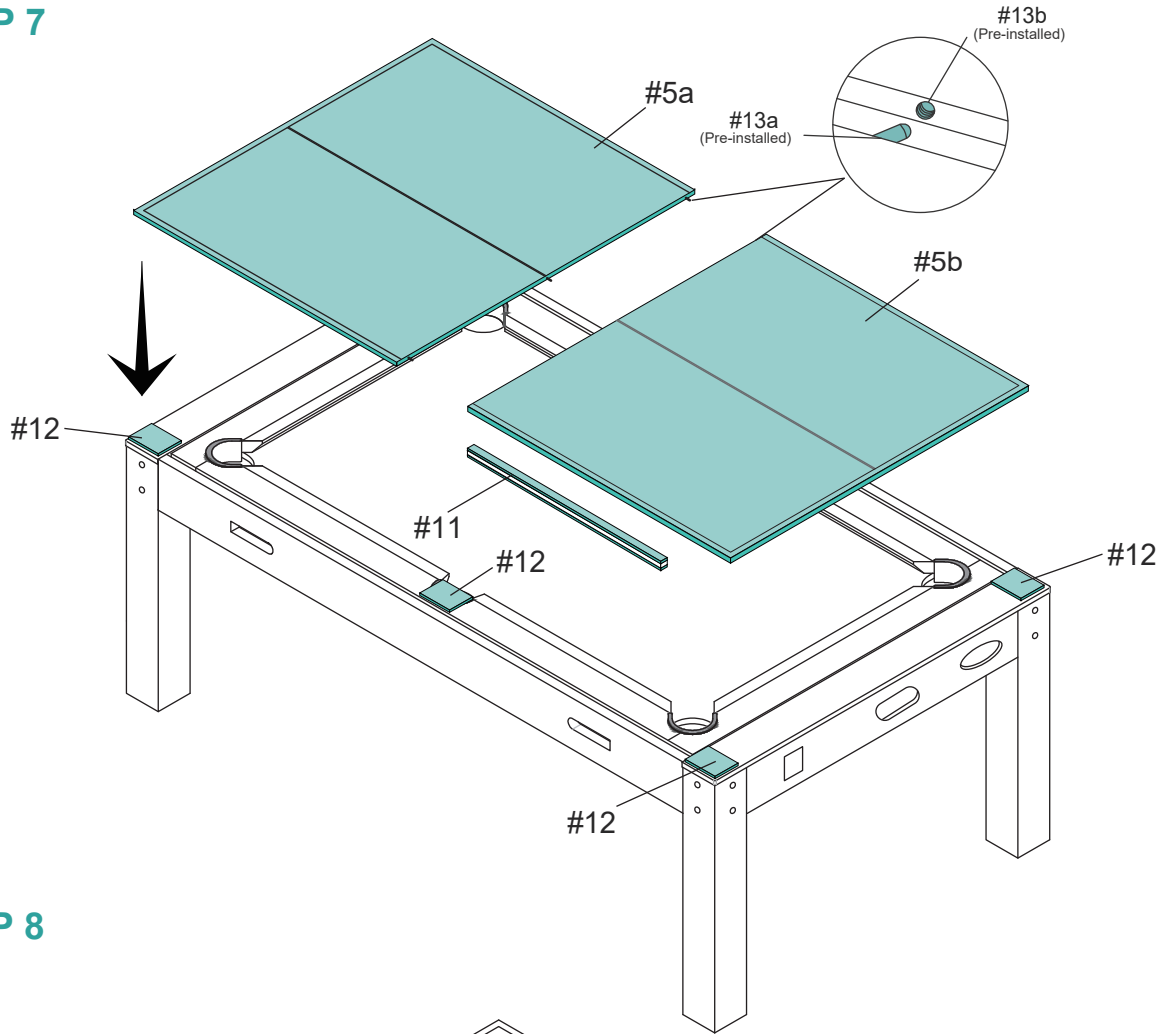


 STEP 8

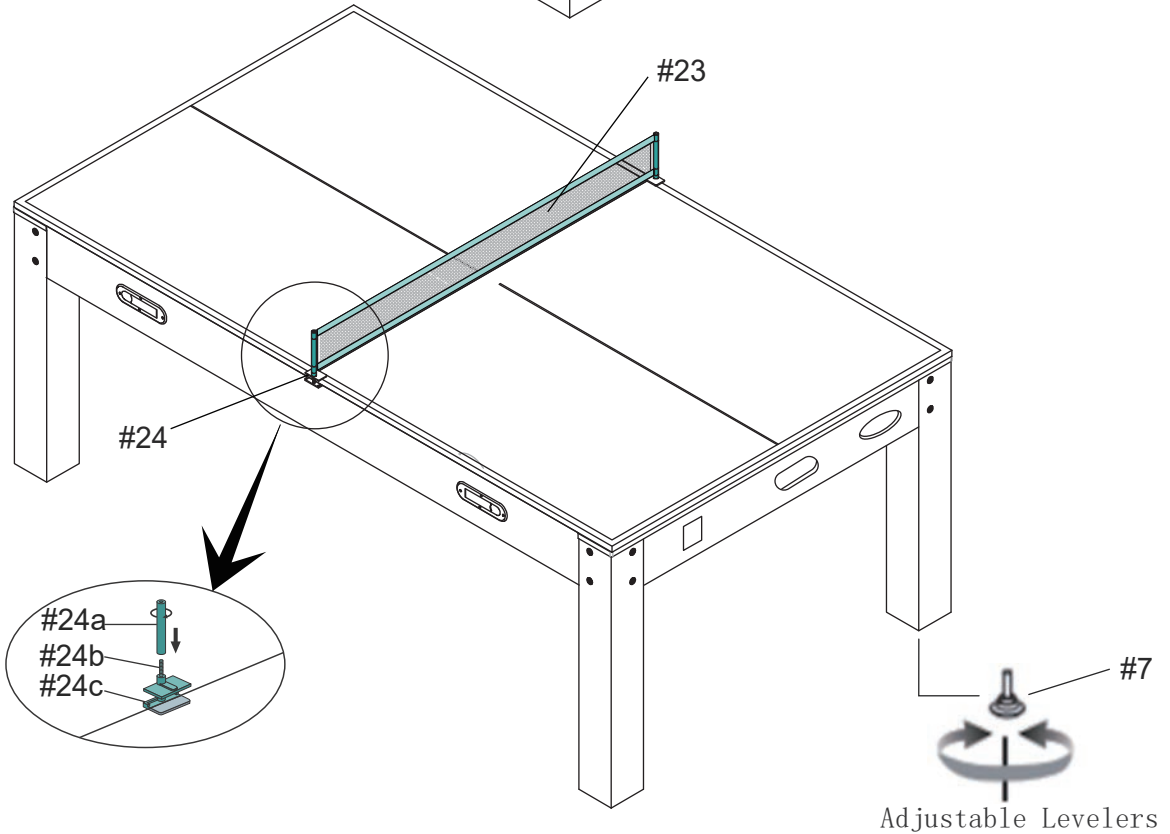

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

  STEP 9

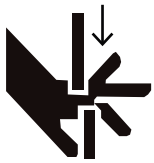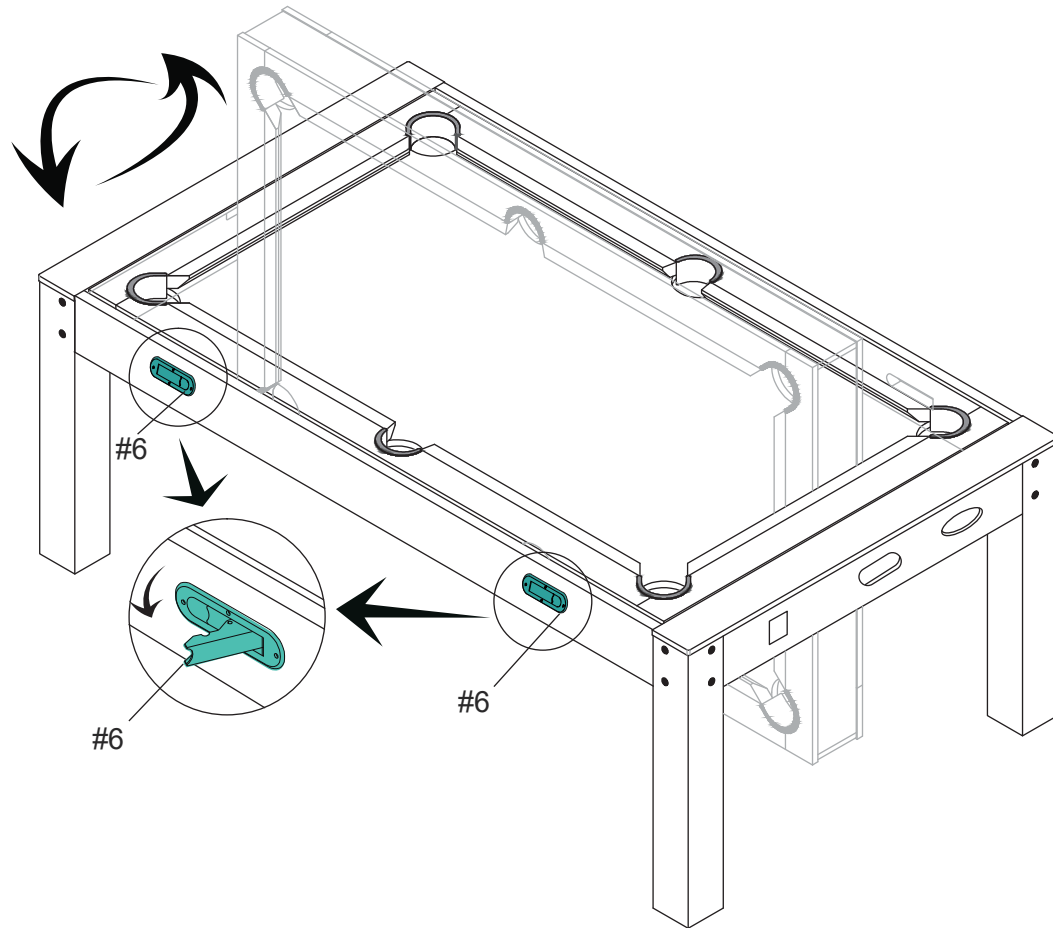

⚠ WARNING

 
Pinch point

keep hands clear
during surface rotation

Pull all four #6 safety latches outward to release the game play surface, carefully rotate the game surface to the desired game you want to play – (Billiards or Air Hockey) - press all four of the #6 safety latches inward to lock the play surface in place and ready for game play.

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

STEP 10

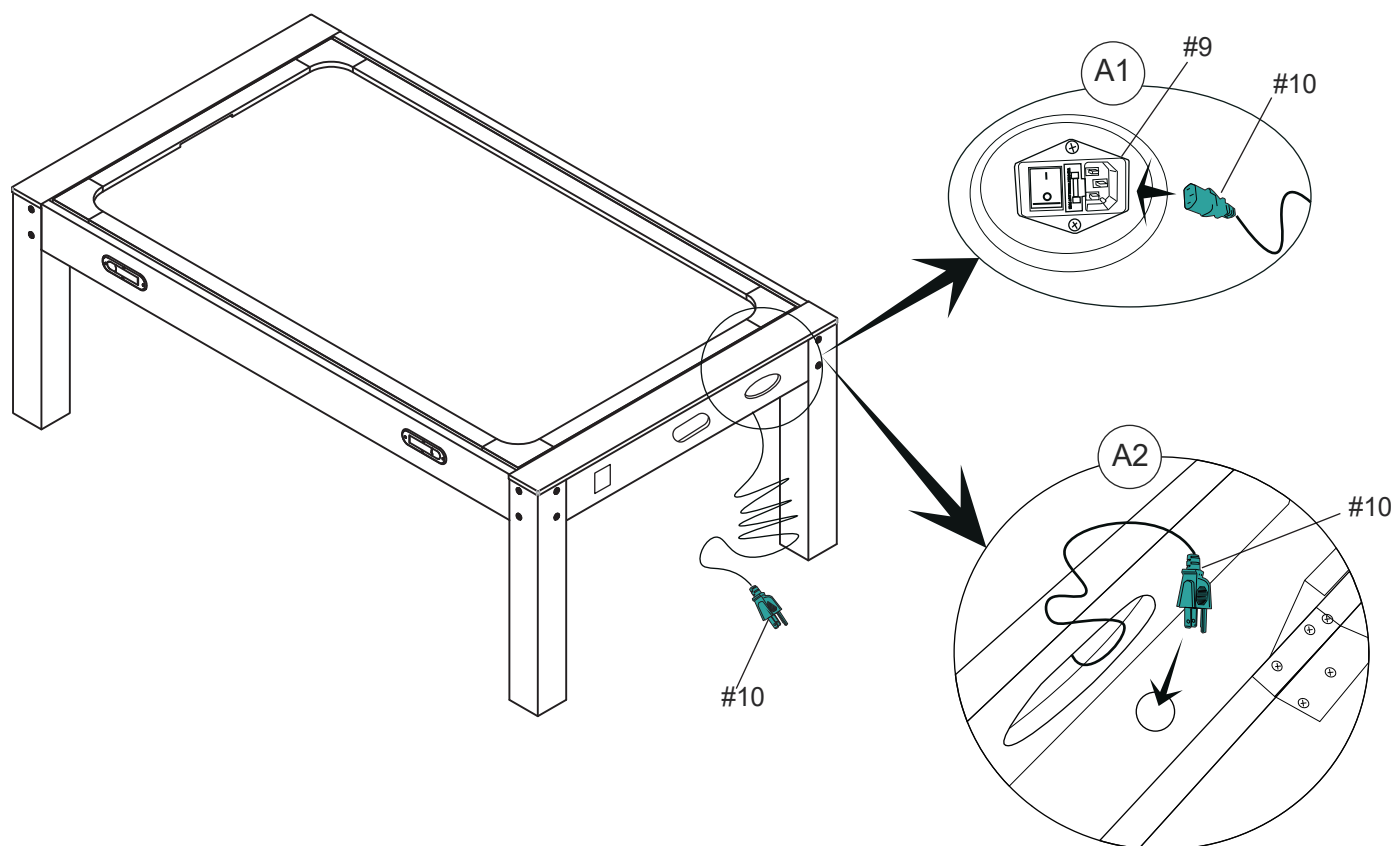

Note: For air hockey table play, insert the female end of the power cord into the power cord socket located at the end table panel, thread the male cord plug through the pre-drilled hole in the bottom of the end panel and into the electrical wall outlet.

CAUTION: This plug must be unplugged and removed prior to rotating the game surface from air hockey to billiards.

7' TRANSFORMER 4 IN 1 MULTI GAME TABLE

STEP 11

 
 
Proper Air Hockey Striker Usage



Note: The pre-installed felt on the bottom of the striker provides fast easy gliding action while protecting the tabletop surface.



Usage: The striker should be firmly gripped and remain flat on the play surface to avoid potential surface damage and provide proper game play.

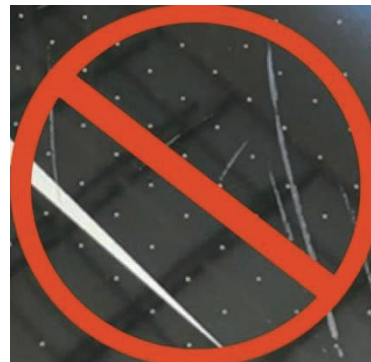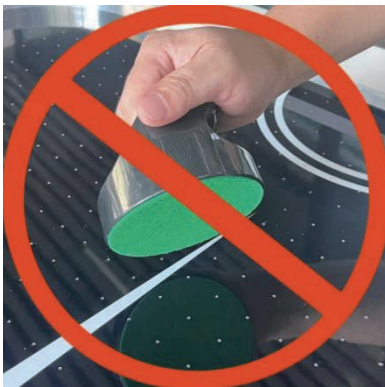

Warning: The striker should never be elevated above the play surface during game play, this is considered an illegal move. Surface damage may occur if the edge of the striker makes contact with the play surface, leaving permanent scratches/scuff marks in the surface finish.

1-YEAR LIMITED WARRANTY

This product is warranted to the original purchaser to be free from defects in material or workmanship for a period of 1-Year from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident, or any other event beyond the control of the manufacturer. Defect or damage resulting from misuse, abuse, or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use: the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Labor charges and related expenses for removal, installation or replacement of the product, or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product, or other consequential or incidental costs, expenses or damage incurred by the consumer of any other use.

All warranty claims must be made to Freetime Fun. A purchase receipt with purchase date will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.

**BE SURE TO CHECK OUR WEBSITE AT FREETIMEFUN.COM
FOR GREAT NEW GAMES, SAUNAS, PATIO, AND POOL SUPPLIES FOR YOUR HOME AND FAMILY!
WWW.FREETIMEFUN.COM**



1830 E. FABYAN PKWY, BATAVIA, IL 60510
PHONE: 1-888-620-6088
EMAIL: CUSTOMERSERVICE@FREETIMEFUN.COM

TO ORDER REPLACEMENT PARTS
VISIT OUR WEBSITE
WWW.FREETIMEFUN.COM