
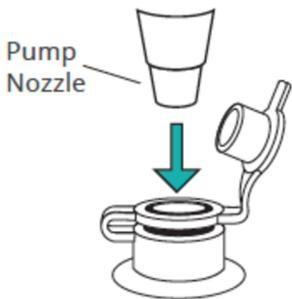


Thank you for purchasing this product. **If you experience any issues during assembly or use of this product, please don't hesitate to contact Customer Service at 1-888-620-6088 for immediate assistance.** Check all packaging before discarding. Be sure all parts identified in the assembly manual are included. Don't assemble if parts are missing.

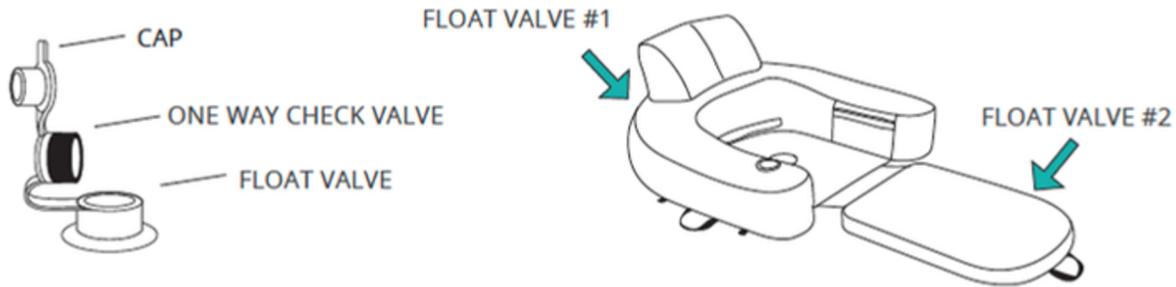


INFLATE:

Depress check valve into the float valve firmly.

Insert pump nozzle and fill float to the desired firmness.



Push cap firmly into the check valve.

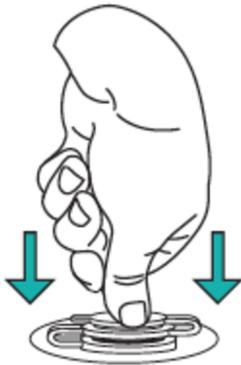

Push down firmly on the cap until entire valve collapses flush with the float bladder.



DEFLATE:

Pull valve up from the body of the float and then pull the check valve out of the float valve.

1-YEAR LIMITED WARRANTY 2-YEAR PUNCTURE RESISTANT WARRANTY

This product is warranted to the original purchaser to be from defects in the material and workmanship for a period of 1-year. In addition this product is covered by the following warranties:

- 2-year puncture resistant warranty. This covers the float in normal use and does not include damage from sharp objects or abuse.

This warranty does not cover defects or damage due to improper installation, alteration, accident, or any other event beyond the control of the manufacturer. Defect or damage resulting from misuse, abuse, or negligence will void this warranty.

This product is not intended for institutional or commercial use: the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

All warranty claims must be made to Freetime Fun. A purchase receipt with purchase date will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.